



## OWNER'S MANUAL



RETAIN OWNER'S MANUAL  
FOR FUTURE REFERENCE

MELBOURNE  
TFG  
23 KELLETTS RD  
ROWVILLE VIC 3178  
PH:03 9765 9999

SYDNEY  
TFG  
OFFICE 4,11-13 ORION RD  
LANE COVE WEST NSW 2066  
PH: 02 9420 9988

BRISBANE  
TFG  
24-30 BLANCK ST  
ORMEAU QLD 4208  
PH:07 5540 7181

ADELAIDE  
UNIT 3,35 JACOBSON CRES  
HOLDEN HILL SA 5088  
PH:08 8266 6386

PERTH  
UNIT 1/100 WALTERS DRIVE  
OSBORNE PARK WA 6017  
PH:08 9444 6977

## **TABLE OF CONTENTS**

* SAFETY	-----	P1~P2
* WARM-UP & COOL DOWN	-----	P3
* UNPACKING & ASSEMBLY	-----	P4
* ASSEMBLY DRAWING	-----	P5~P6
* COMPUTER OPERATIONS Control panel function, control panel operation	-----	P7~P9
* BELT ADJUSTMENT	-----	P10
* CARE & MAINTENANCE	-----	P11
* TROUBLE SHOOTING	-----	P12
* PARTS LIST	-----	P13
* PARTS LIST- BOLTS	-----	P14
* EXPLODED DRAWING	-----	P15

# SAFETY

**IMPORTANT: Read all instructions and warnings before using the treadmill**

## **IMPORTANT VOLTAGE INFORMATION !**

Before plugging the power cord into an electrical outlet, verify that the voltage requirements for your area match the voltage of the treadmill that you have received,. The power requirements for this treadmill include a grounded, dedicated circuit, rated for one of the following: 115VAC +- 5%, 60Hz and 20amps; 208/220 VAC, 60Hz, 15amps or 230 VAC +- 5%, 50Hz and 10amps. Check with your dealer for the exact voltage requirements of your treadmill. Use of wrong voltage will damage the treadmill.

**WARNING! :** Do not attempt to use this treadmill with a voltage adapter.  
Do not attempt to use this treadmill with an extension cord.

## **GROUNDING INSTRUCTIONS**

This treadmill must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

## **DANGER!**

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service provider if you are in doubt as to whether the treadmill is properly grounded.

## **CONSULT A PHYSICIAN IMMEDIATELY**


Warning: before starting any exercise program consult your physician. This is especially important for individuals over the age of 35 or persons with pre-existing health problems. Read all instructions before using any fitness equipment. We assume no responsibility for personal injury damage sustained by or through the use of this treadmill.

## **IMPORTANT SAFETY INSTRUCTIONS**

- Obtain a medical exam before beginning any exercise program.
- Keep children and pets away from the treadmill. Teenagers and disabled persons must be supervised while using the treadmill.
- Stop exercising if you feel faint, dizzy, or experience pain at any time while exercising and consult your physician.
- Clip the SAFETY KEY onto your clothing and carefully test it prior to using the treadmill. Safety key is for emergency use to stop the treadmill. The runner MUST clip the safety key on the clothing while using treadmill
- Disconnect all power before servicing the treadmill.
- Connect the treadmill to a properly grounded outlet only.
- Do not operate electrically powered treadmill in damp or wet locations.
- Use this treadmill for consumer use only.
- Remove the SAFETY KEY when not in use.
- Inspect the treadmill for worn or loose components before each use.
- Do not operate the treadmill if 1. The power cord is damaged; 2. the treadmill is not working properly; 3. The treadmill has been dropped or damaged.
- Do not use the treadmill outdoors.
- Read and understand this owner's manual completely before using the treadmill.
- Read and understand all warnings posted on the treadmill and in this owner's manual.
- Do not wear loose or dangling clothing while using the treadmill.
- Always wear proper footwear on or around exercise equipment.
- Set up and operate the treadmill on a solid, level surface. Do not operate in recessed areas or on plush carpet.
- Provide the following clearances: 100cm at each side, 200cm at the back and enough room for safe access and passage at the front of the treadmill.
- Do not modify the treadmill in any way.

# SAFETY

## TARGET HEART RATE ZONE

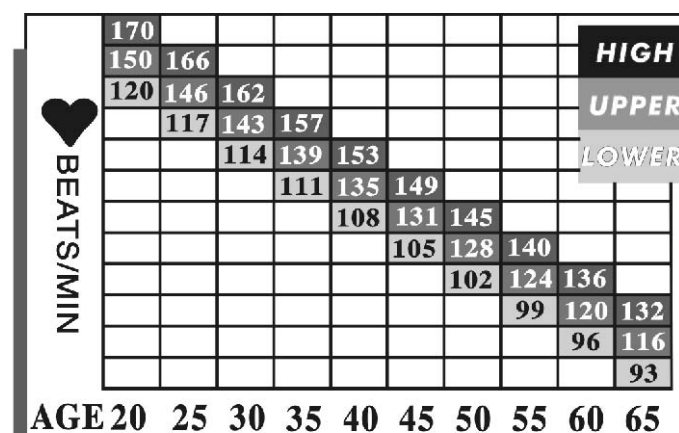

Target Heart Rate Zone  
 $220 - \text{your age} = \text{maximum heart zone}$

You do not want to workout at your maximum heart rate. The recommended Heart Rate Zone is a percentage of your maximum heart rate. Between 60% and 75% of your maximum heart rate.

Lower limit of Target Heart Rate Zone = maximum heart rate X 0.6

Upper limit of Target Heart Rate Zone  
 = Maximum heart rate X 0.75

(This is recommended by American Heart Association. Before starting exercise program, please consult your physician to understand your physical situation)

## HOW OFTEN SHOULD YOU EXERCISE:

You should exercise three to four times a week to improve your cardiovascular and muscle fitness.

## HOW HARD SHOULD YOU EXERCISE:

Intensity of exercise is reflected in your heart rate. Exercise must be sufficiently rigorous to strengthen your heart muscle and condition your cardiovascular system. Only your doctor can prescribe the target training heart range for you. Before starting any exercise program consult your physician.

## HOW LONG SHOULD YOU EXERCISE:

Sustained exercise conditions your heart, lungs and muscles. The longer you are able to sustain exercise within your target heart range, the greater the aerobic benefits. To begin maintain 2~3 minutes of steady, rhythmic exercise, then check your heart rate.

## BEGINNER TREADMILL PROGRAM

	EXERTION LEVEL	DURATION
WEEK 1	Easy	6~12 minutes
WEEK 2	Easy	10~16 minutes
WEEK 3	Moderate	14~20 minutes
WEEK 4	Moderate	18~24 minutes
WEEK 5	Moderate	22~28 minutes
WEEK 6	Slightly higher or slightly lower	20 minutes
WEEK 7	Add interval training	3 minutes at moderate exertion with 3 minutes at higher exertion for 24 minutes

# WARM-UP & COOL DOWN

## WARM- UP& COOL-DOWN

A successful exercise program consists of a warm up, aerobic exercise, and a cool down. Warming up is an important part of your workout, and should begin every session. It prepares your body for more strenuous exercise by heating up and stretching out every muscles. At the end of your workout, repeat these exercises to reduce sore muscle problems. We suggest the following warm-up and cool-down exercises:

1

### Head rolls


Rotate your head to the right for one count, feeling the stretch up the left side of your neck. Next rotate your head back for one count, stretching your chin to the ceiling and letting your mouth open. Rotate your head to the left for one count, and finally, drop your head to your chest for one count.



2

### Shoulder lifts

Lift your right shoulder up toward your ear for one count. Then lift your left shoulder up for one count as you lower your right shoulder.

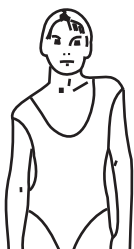

3

### Side stretches

Open your arms to the side and continue lifting them until they are over your head. Reach your right arm as far upward toward the ceiling as you can for one count. Feel the stretch up your right side. Repeat this action with your left arm.



4

### Inner thigh stretch

Sit with the soles of your feet together with your knees pointing outward. Pull your feet as close into your groin as possible. Gently push your knees toward the floor. Hold for 15 counts.



5

### Toe touches

Slowly bend forward from your waist, letting your back and shoulder relax as you stretch toward your toes. Reach down as far as you can and hold for 15 seconds.



6

### Quadriceps stretch

With one hand against a wall for balance, reach behind you and pull your right foot up. Bring your heel as close to your buttocks as possible. Hold for 15 counts and repeat with left foot up.



7

### Hamstring stretches

Sit with your right leg straight in front of you. Straighten your leg out while trying to hold on to your outstretched leg with your hand. Starting up with your back straight. Slowly exhale and try to bring your chest to the knee of your outstretched leg. Hold, then repeat on the other side for 15 seconds.



8

### Calf/achilles stretch

Lean against a wall with your left leg in front of the right and your arms forward. Keep your right leg straight and the left foot on the floor; then bend the left leg and lean forward by moving your hips toward the wall. Hold, then repeat on the other side for 15 seconds.



## UNPACKING & ASSEMBLY


**WARNING!** Use extreme caution when assembling the treadmill. Failure to do so could result in injury

**NOTE:** Each step number in the assembly instructions tells you what you will be doing. Read and understand all instructions thoroughly before assembling the treadmill.


1. Unpack the carton and take off all of separated parts outside carton.
2. Tear open the carton as the picture showing, fold up the treadmill.
3. Hold on roller cover by two hands and lean back the treadmill, move the treadmill forward as the picture showing.

Failure to follow this procedure may result in serious injury due to pinch point area on the front frame near the motor cover.




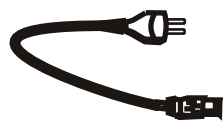
○ CORRECT

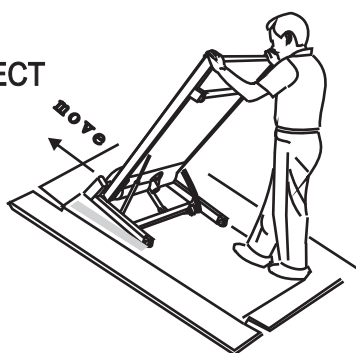



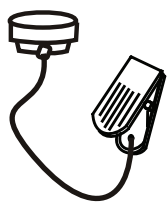
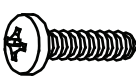

✗ WRONG

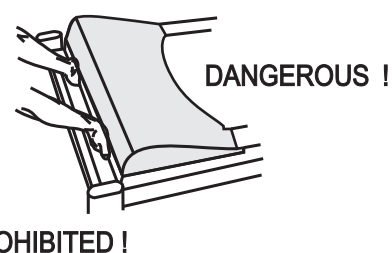


Check the following items are present. If any of the parts are missing, contact with the dealer.

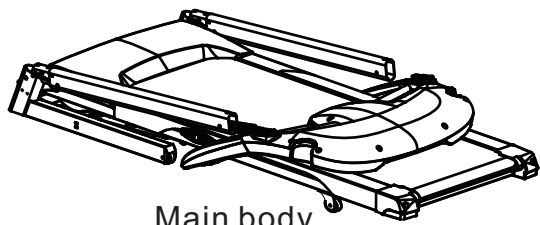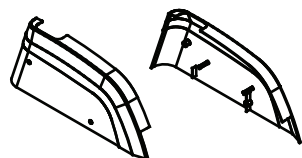 <p>Main body</p>	 <p>Protective cover</p>
 <p>Hardware kit</p>	 <p>Power cord</p>

### HARDWARE KIT

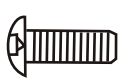 <p>M8X15mm hex socket head bolt 12pcs (base frame and console)</p>	 <p>Allen wrench</p>	 <p>Safety key</p>
 <p>Self tapping screw <math>\varphi</math> 4X10mm 4pcs</p>	 <p>Lubricant for running deck</p>	

# ASSEMBLY DRAWING

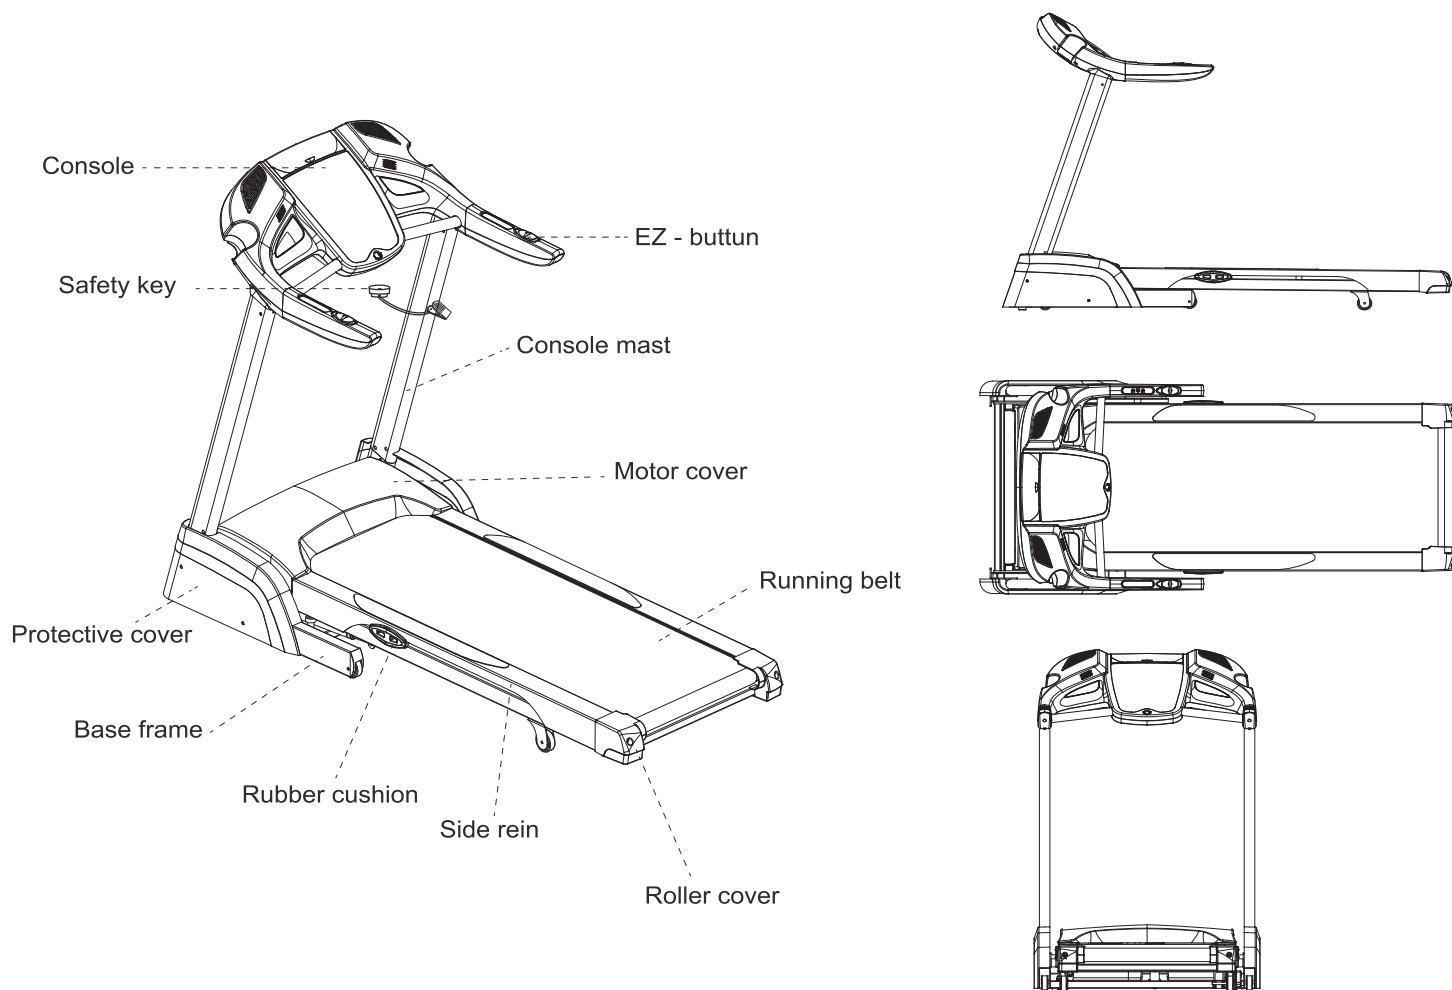

## MOVEMENT :


### How to move the treadmill (in folded position)?

**This treadmill is designed with wheels for easy movement.**

- 1). Make sure the elevation is at the lowest position. ( display shows 0 level)
- 2). Turn off and unplug the power cord, fold up the running deck. make sure that it is in locked position.

**WARNING!** As you raise the running deck, lift using your legs, not your back to avoid the injury.

- 3). Face the bottom of the running deck and hold on the handlebars to move the treadmill forward or backward to the desired place.
- 4). unlock and fold down the running deck. then plug the power cord.

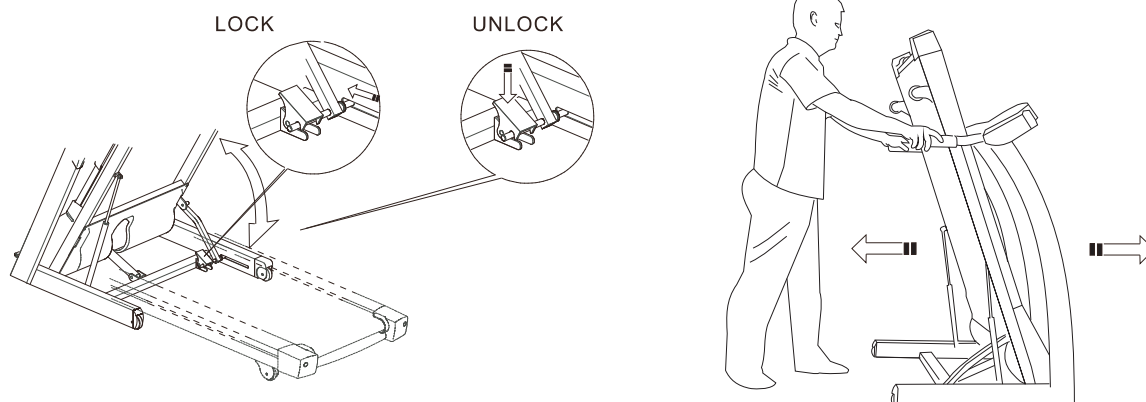


Note: the drawing above may not be identical to your particular model.




## ASSEMBLY DRAWING

✗ DANGEROUS !

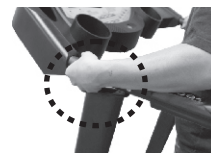


Do not hold on this place while assembling. The fingers would be jammed

### STEP 1- Assembly the console masts and the console

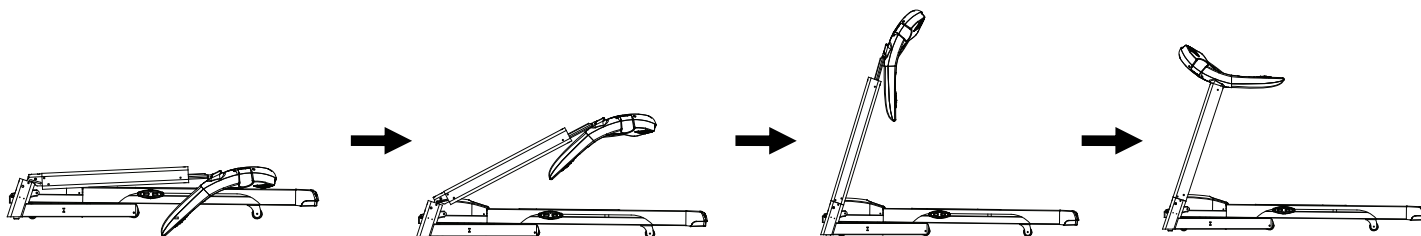


### STEP 2- Secure the bolts on console mast

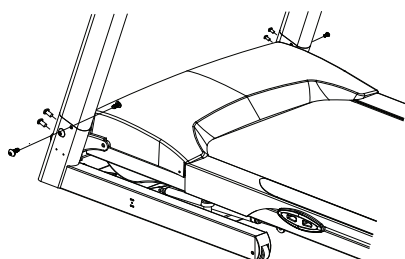

A).Secure the right console mast with 4 pcs of M8X15mm,using Allen wrench.Do the same on left console mast  
(Do not tighten the bolts)


### STEP 3- Put the console onto to the console masts

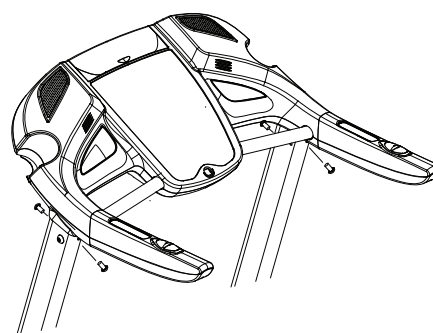

A).Secure with 2 pcs of M8X15mm bolt on the right console mast,using Allen wrench.Do the same on left console mast  
(Do not tighten the bolts)


### STEP 4- Tighten STEP2 and STEP3 bolts

### STEP 5- Attach the protective cover

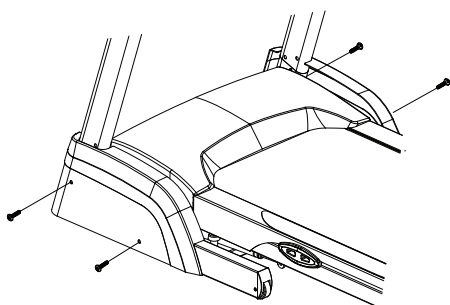

A). Assembly the protective cover to base frame, secure with screw 4X10mm using Allen wrench.



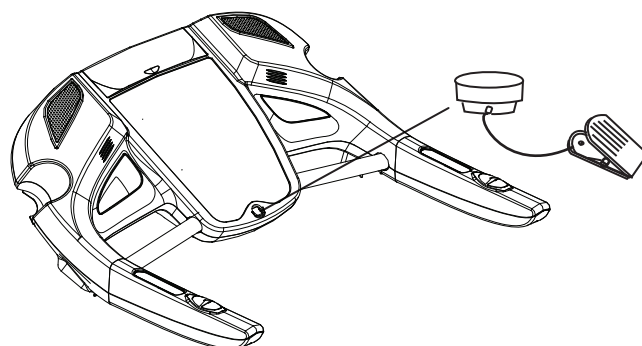

### STEP 6- Put the safety key on its position





# COMPUTER OPERATIONS

## CONTROL PANEL FUNCTION

- SELECTION KEY**
1. Press  /  to select the function you need
2. Press  /  to adjust the setting

**P-DATA CLEAR:** Clear Personal Data

**START:** Start the treadmill

**STOP:** Stop the treadmill

**INCLINE UP(+)/DOWN(-):** Adjust INCLINE

**SPEED FAST(+)/SLOW(-):** Adjust SPEED

**COOL DOWN:** Used to start cool down function

**ENTER:** Press "ENTER" to confirm your setting

**RETURN:** Press "RETURN" back to your last page


**ONE-TOUCH SPEED 4, 8, 10, 12 :** Used to reach ideal speed



**ONE-TOUCH INCLINE 0, 3, 9, 15 :** Used to reach ideal incline

Audio in 

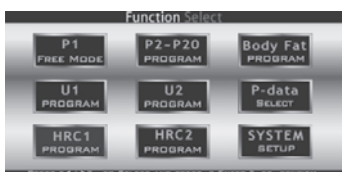

## COMPUTER OPERATION



Press  /  to select

Press "ENTER" to confirm your setting



- DISTANCE** Indicate the distance travelled in 0.1KM increment.
- PULSE** Estimated heart rate
- TIME** Indicate the time you workout.
- CALORIES** Estimated the calories burned in 1kca increment.
- INCLINE** Indicate the incline in 1 level increment.
- SPEED** Indicate the speed in 0.1KM increment.


Press  /  to set up time

Press "ENTER" to start

Press  /  to select

Press "ENTER" to confirm the setting

Press "RETURN" back to the last page

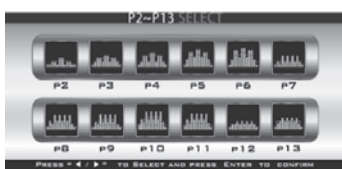

# COMPUTER OPERATIONS



Press ◀ / ▶ to select

Press ▲ / ▼ to adjust the setting and


Press "ENTER" to confirm it



Press ◀ / ▶ to select

Press ▲ / ▼ to adjust the setting and

press "ENTER" to confirm it

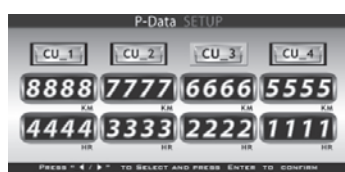


CU\_1 CU\_2 CU\_3 CU\_4 :

It provides 4 different personal data to keep memorizing the total used hours and distance for 4 different persons

Press ◀ / ▶ to select

press "ENTER" to confirm the setting

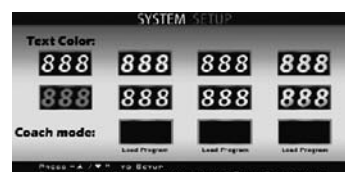

**Text Color:** Press ◀ / ▶ to choose the text color you prefer

Press "ENTER" to confirm the setting

## ONE-TOUCH SPEED/ONE-TOUCH INCLINE

ONE-TOUCH SPEED/INCLINE provide a comfortable and convenient operation to treadmill, especially for professional runner.

### ONE-TOUCH INCLINE

There is one set of ONE-TOUCH INCLINE control panel on the console overlay for user to select the ideal incline.

15 Incline level 15

9 Incline level 9

3 Incline level 3

0 Incline level 0

### ONE-TOUCH SPEED

There is one set of ONE-TOUCH SPEED control panel on the console overlay for user to select the ideal speed.

Speed 12kilometer per hour 12


Speed 10kilometer per hour 10

Speed 8kilometer per hour 8

Speed 4kilometer per hour 4


## EZ-BUTTON:

EZ-BUTTON is designed for the beginner. You can grip on handlebar and adjust speed and incline. Also allow you to stop or start your workout while you are gripping on handlebar. you are gripping on handlebar. It means this treadmill is with double safety protections, besides safety key, EZ-BUTTON design will supply the runner much safety protection.

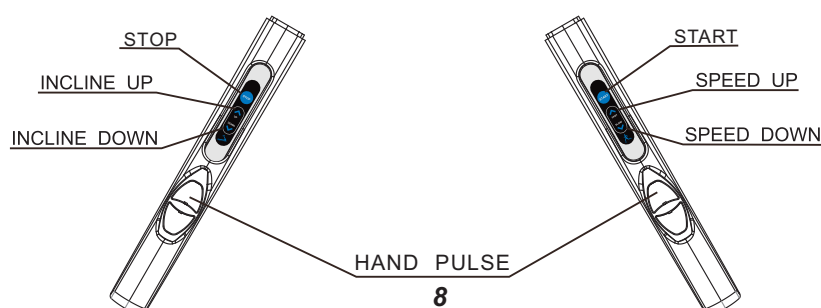

## COMPUTER OPERATIONS

## HRC OPERATION:

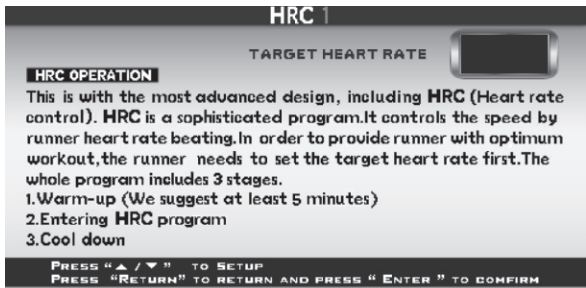

Press  /  to select

**Press "ENTER" to confirm**

**Press "RETURN" to return**


You do not want to workout at your maximum heart rate. The recommended Heart Rate Zone is a percentage of your maximum heart rate. Between 60% and 75% of your maximum heart rate.

Lower limit of Target Heart Rate Zone = maximum heart rate  $\times 0.6$

Upper limit of Target Heart Rate Zone  
=Maximum heart rate X0.75

(This is recommended by American Heart Association. Before starting exercise program, please consult your physician to understand your physical situation)

## TARGET HEART RATE ZONE

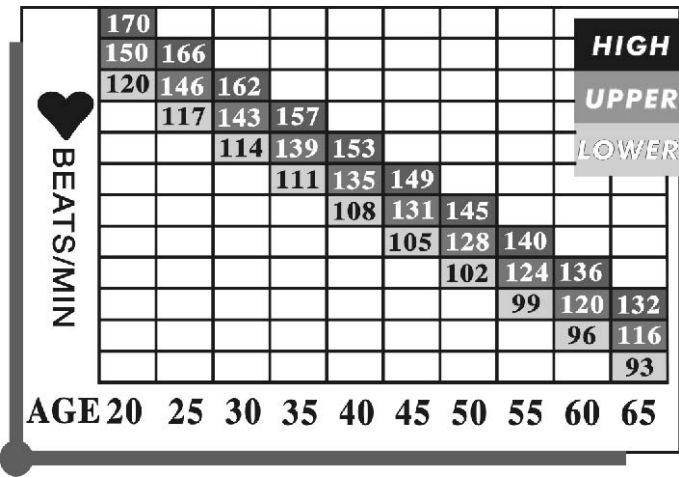


## Target Heart Rate Zone

**220-your age =maximum heart zone**

## CHEST STRAP TRANSMITTER

To operate HRC, the user needs to wear a chest strap transmitter

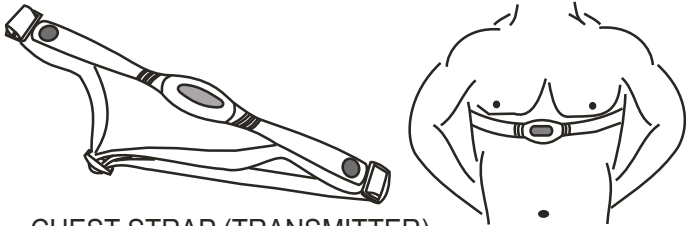


## CHEST STRAP (TRANSMITTER)

CHEST STRAP is not standard specification. It is optional, please contact your dealer for more details.

ATTENTION: Please use Polar belt compatible chest strap.

## TRANSMITTING AREA

The transmitting area is around 1 meter on straight line. Please see the below drawing for more detail for transmitting area.

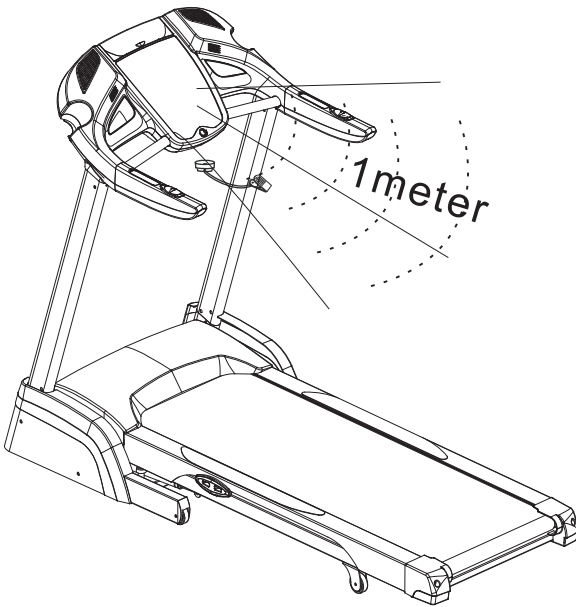

# BELT ADJUSTMENT

## BELT ADJUSTMENT

You may need to adjust the running belt during the first few weeks of use. All running belts are properly set at the factory. It may stretch or be off-center after use. Stretching is normal during the break-in period.

### ADJUSTING THE BELT TENSION

If the running belt feels as though it is "slipping" or hesitating when you plant your foot during a run, the tension on the running belt may have to be increased.

### TO INCREASE THE RUNNING BELT TENSION:

- A. Place 8MM wrench on the left belt tension bolt. Turn the wrench clockwise 1/4 turn to draw the rear roller and increase the belt tension.
- B. Repeat STEP A for the right belt tension bolt. You must be sure to turn both bolts the same number of turns, so the rear roller will stay square relative to the frame.
- C. Repeat STEP A and STEP B until the slipping is eliminated.
- D. Be careful not to tighten the running belt tension too much as you can create excessive pressure on the front and rear roller bearings. An excessively tightened running belt may damage the roller bearings that would result in bearing noise from the front and rear rollers.



**TO DECREASE THE TENSION ON THE RUNNING BELT, TURN BOTH BOLTS COUNTER-CLOCKWISE THE SAME NUMBER OF TURNS.**

### CENTERING THE RUNNING BELT

When you run, you may push off harder with one foot than with another. The severity of the deflection depends on the amount of force that one foot exerts in the relation to the other. This deflection can cause the belt to move off-center. This deflection is normal and the running belt will centre when no body is on the running belt. If the running belt remains consistently off-center, you will need to centre the running belt manually.

- A).** Start the treadmill without anyone on the running belt, press (SPEED UP) button until speed reached 6kph.
- B).** Observe whether the running belt is toward the right or left side of the deck.
  - a. If toward the left side of the deck  
Using wrench, turn the left adjustment bolt clockwise 1/4, or turn the right adjustment bolt counterclockwise 1/4.
  - b. If toward the right side of the deck  
Using wrench, turn the right adjustment bolt clockwise 1/4, or turn the left adjustment bolt counterclockwise 1/4.
  - c. If the belt is still not centered, repeats the above steps until the running belt is on center.
- C).** After the belt is centered, increase the speed to 16kph and verify that it is running smoothly. Repeat the above steps if it is necessary.

If the above procedure is unsuccessful in resolving the off-center, you may need to increase the belt tension.

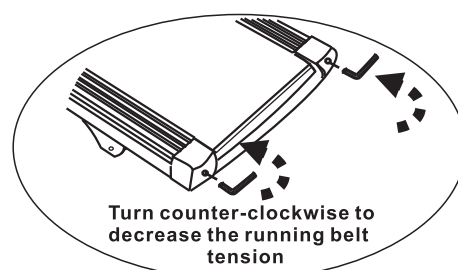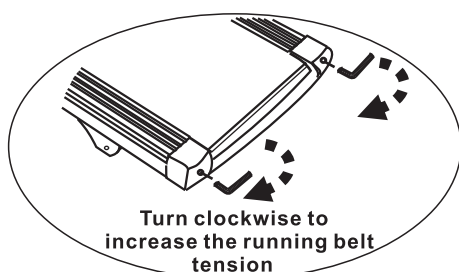

## CARE & MAINTENANCE

**WARNING!:** To prevent electrical shock, be certain the treadmill is turned off and unplugged before cleaning or routine maintenance.

### RUNNING BELT AND RUNNING DECK LUBRICATION

For maximum treadmill life, this treadmill needs a routine lubrication as part of a general maintenance for the machine. The routine maintenance procedure will prevent premature wear of the running belt, running deck and drive motor system. The recommended lubrication schedule as:

USAGE	LUBRICATION
1~6kph	Every 3 months
6~12kph	Every 2 months
12~16kph	Every 1 months



Lubricant for running deck

This schedule is the recommended application for a single user, up to 20~30 minutes per time. 3~4 times per week. For lubrication, you can contact your dealer.

### CLEANING

Perspiration should be wiped from the console and treadmill surface after your workout.

You should wipe down your treadmill once a week with a water dampened, soft cloth. Be careful not get excessive moisture on the display panel as this might cause an electrical hazard or electronics to fail.

### STORAGE

Store your treadmill in a clean and dry environment. Ensure the master power switch is off and is un-unplugged from the electrical wall outlet.

### MOVING

This treadmill has been designed and equipped with wheels for easy mobility. Before moving, ensure the master power switch is in the off position and the power cord is unplugged from the electrical outlet.

### FOR CONSUMER/HOME USE ONLY!!

This treadmill is designed for home use only. Do not use for light institutional or commercial.

### LUBRICATION

It is important to take good care of your treadmill deck (the walking surface underneath the belt). A good silicone lubrication will also improve the performance of your treadmill.

**NOTE:** Use the silicone that is supplied with the treadmill. Additional silicone lubricant can be purchased from your retail store.

**WARNING: STOP** the treadmill and remove the safety key before lubricating the running deck.

A). Find the silicone bottle. It is located in the hardware kit package included with this treadmill..

B). Find a straw and put it onto the silicone bottle as the drawing shows.

C). Spray silicone evenly on treadmill deck as the drawing shows. (ATTENTION : The treadmill **MUST BE STOPPED** before applying the silicone lubricant. This is to prevent injury, otherwise the edge of the running belt may cut you or your fingers could be crushed by the rollers. )

Do not put too much silicone on the deck. Excessive lubricant may cause slippage of the belt on the rollers.


### HOW TO SPRAY SILICONE ON DECK?

A




Silicone bottle

B

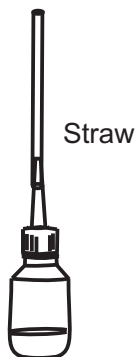

Put on straw

C

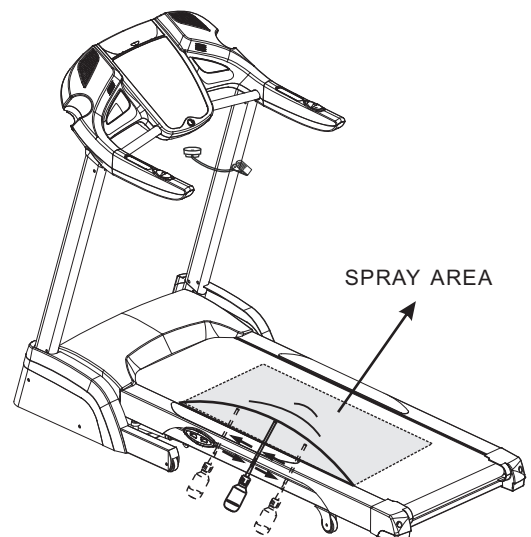

# TROUBLE SHOOTING

## TROUBLE SHOOTING GUIDE

SYMPTOM	CAUSE	SOLUTION
Console display LCD's do not illuminate	a. No power to treadmill b. Console wire connector not connected or incompletely connected c. Overload protection is activated	Check the on-off switch Turn off, then turn on power. Push START, Check all of connected wires, if still not illuminated, a service is required
Scrambled digitalis on console LCD	Damaged console	Service required
Show E1	a. RPM sensor problem b. Sensor wire not connect to controller or improper connection c. Motor wire not connected d. Console wires not connect properly e. Controller damaged  f. Overload protection is activated	Service required  Check the lubrication, running belt tension, turn off, then turn on power

The most happened symptom is current overload protection. And show E1(error 1) on monitor. E1 is to inform the runner to examine your treadmill by yourself to avoid the damage happened on treadmill. The runner can follow the below steps to do the examination.

1). E1 would be happened by electricity system at your home. Sudden big current would cause E1. Please turn off the on-off switch, then turn on the switch to resume the using.

If it still happened, the most reason is too much friction between the running belt and the running deck.

2). Please do lubrication according to LUBRICATION MAINTENANCE instructions. Enough lubrication will improve the performance and maximum the treadmill life.

3). Keep clean under running belt.

4). Check the tension between roller and running belt. (please see BELT ADJUSTMENT)

5). The damaged running belt will increase the current and be easy to cause E1. Wear proper footwear while using. It can avoid to damage the running belt.

If still can not solve it, please call your dealer for helps.



## PARTS LIST

ITEM		DESCRIPTION	QTY	ITEM		DESCRIPTION	QTY
AB1	ST29-AB1	Main frame	1	H01	ST82-H01	Upper console case	1
B19	ST01-B19	Motor place	1	H02	ST82-H02	Lower console case	1
B20	ST82-B21	Rubber cushion	2	H03	ST66-H03	LCD Screen cover	1
B21	ST08-B21	Rubber cushion	8	H04	ST82-H04	Overlay , console	1
B22	ST32-B22	Running belt	1	Z02	ST01-Z02	Safety key set	1
B23	ST82-B23	Side rein	2	H07	ST57-H15	Monitor 7 inch TFT-LCD	1
B24	ST82-B24	Upper motor cover	1	H08	ST57-H08	Monitor	1
B25	ST10-B25	Lower motor cover	1	H09	ST03-H09	Sensor wire , monitor	1
B26	ST82-B26	Roller cover, left	1	H10	ST02-H10	Hear rate PCB	1
B27	ST01-B27	Mobile wheel	2	H11	ST01-H11	Upper console wire	1
B28	ST25-B28	End cap , main frame	2	H15	ST82-H15	Membrane key	1
B33	ST82-B33	Roller cover, right	1	H16	ST66-H16	TFT fixing bracket	1
B39	ST29-B46	Running deck	1	H25	ST82-H25	Key - chain box-L	1
B41	ST82-B41	Anti-slip pad	2	H26	ST82-H26	Key - chain box-R	1
B45	ST29-B45	Supporting tube	1	H27	ST82-H27	Top box cover	1
AC6	ST82-AC6	Base frame	1	H28	ST82-H28	Resistance key	1
C11	ST03-C11	Foot step	1	H29	ST82-H29	Lock pin	1
C13	ST08-C13	Mobile wheel housing	2	H30	ST03-H30	Loudspeaker	2
C14	ST01-C14	Mobile wheel, base frame	2	H31	ST11-H31	MP3 board	1
C16	ST01-C16	Pad, base frame	4	H40	ST82-H40	Top box spring-L	1
C18	ST01-C18	Spring, foot step	1	H41	ST82-H41	Top box spring-R	1
C22	ST82-C37	Protective cover, left	1	J01	ST29-J01	Motor	1
C23	ST82-C35	Protective cover, right	1	J02	ST04-J02	Incline motor	1
C28	ST25-C28	Rotary bracket	2	J03	ST14-J03	Controller	1
C29	ST27-B27	Wheel	2	J08	ST01-J08	Wire, motor sensor	1
AE1	ST03-AE1	Fixing arm, folding	1	J09	ST01-J09	Power cord	1
E04	ST06-E04	Air shock	1	J13	ST01-J13	grounded wire	1
E07	ST03-E07	Rubber bush	1	J15	ST03-J15	Lower console wire	1
AD1	ST14-AD1	Lift arm , incline	1	J16	ST06-J16	Socket	1
D03	ST14-D03	Bush, base frame	2	J17	ST06-J17	On/off switch	1
AF1	ST82-AF1	Console frame	1	J18	ST06-J18	Breaker	1
AF2	ST82-AF2	Upper EZ-button case, incline	1	J22	ST08-J22	Fixing bracket, controller	1
AF3	ST82-AF3	Upper EZ-button case, speed	1	J23	ST01-J23	Wave filter	1
F08	ST03-F08	Wire, hand pulse	1	J28	ST01-J28	Wave filter housing	1
F12	ST82-F12	Lower EZ-button case	2	K01	ST34-K01	Front roller	1
AG1	ST82-AG1	Console mast	2	K02	ST25-K02	Rear roller	1
G13	ST82-G13	connecting bracket	2	K03	ST08-K03	Drive belt	1



## PARTS LIST-BOLTS

ITEM	DESCRIPTION	QTY	ITEM	DESCRIPTION	QTY
AB	Bolt M10x40		AU	Bolt M8x25mm	
	Incline motor	1		Air shock	2
AC	Nylon nut M10		AX	Screw $\varphi$ 3x6mm	
	Incline motor	2		Monitor	5
	Lift arm	4		MP3	2
AD	BOLT M8X140mm			7 inch TFT monitor	4
	Motor	1	AX	Screw $\varphi$ 3x10mm	
AG	Nylon nut M8			EZ-button PCB	4
	Motor	2		Sensor wire,Monitor	2
	Air shock	2	AY	Washer M6	
	Fixing arm, folding	1		Front&rear roller	3
	Mobile wheel	2	BB	Screw $\varphi$ 4X15mm	
	Foot step	1		Grounded wire	1
	Mobile wheel housing	2		Filter grounded wire	1
	Rotary bracket	4	BC	Screw $\varphi$ 4X10mm	
AH	Washer M8			Loud speaker	4
	Motor	1		Ground wire	1
AI	Nut M4			Resistance key	1
	Upper motor cover	4	BN	Bolt M10X60mm	
AJ	Self tapping screw 4X15mm			Incline motor	1
	EZ-button	6		Fixing arm, incline	2
	Upper motor cover	4	BP	Bolt copper column M3X10	
	Console frame	6		Wave filter	4
	Fixing bracket, controller	2	BR	M8X40(set)	
	Upper & lower console case	12		Console frame	4
	Rotary bracket	4	BS	M8X25(set)	
AJ	Self tapping screw 4X20mm			Base frame	2
	upper EZ butter cover	2	BQ	Bolt M3X6mm	
AJ	Self tapping screw 4X25mm			wave filter	4
	upper EZ butter cover	2	CJ	Bolt M8x115MM	
AL	Bolt M8X40mm			Motor	1
	Lift arm, folding	1	CK	Screw $\varphi$ 6x15 w/u shap washer	
	Rear mobile wheel	2		Deck	2
	Rotary bracket	2	CO	Bolt M6X65mm	
AN	Bolt M5X10mm			Front & rear roller	3
	Controller	2	CP	Bolt $\varphi$ 6X25mm w/washer	
AO	Self tapping screw $\varphi$ 3X10mm			Running deck	8
	Motor sensor wire	1	SB1	Bolt M10X40	
	Socket	2		Fixing arm,folding	2
AR	Self tapping screw M4X10mm		DE	Screw $\varphi$ 4x10mm	
	Lower motor cover	4		side cover,right left	4
	Left,right roller cover	2	FQ	Screw $\varphi$ 5X25mm	
AT	Bolt M8X50mm			supporting tube	2
	Foot step	1			
	Front mobile wheel	2			
	Mobile wheel house	2			
AS	Bolt M8X15mm				
	Pad, base frame	4			
	console mast	4			
	console frame	8			

**CHEST STRAP (TRANSMITTER)**  
**optimal**

